


QSR® SENSOR CART HEIGHT ADJUSTMENT BAR

PROCEDURE

STEP 1


Using a 4 mm Allen key, loosen the two screws indicated until the motor mounts can pivot freely.

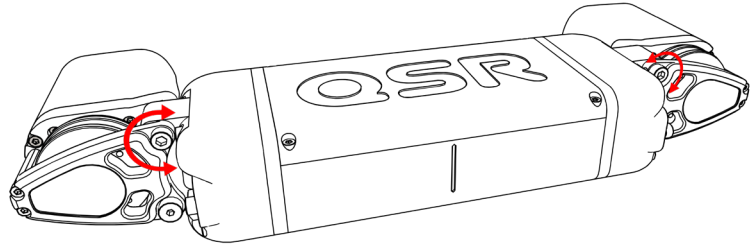

STEP 2

Centre the QSR® Sensor Cart on the Height Adjustment Bar with the selected height facing upwards.

Standard Height <i>Smooth Surface</i>	0.6 mm
Increased Height <i>Rough Surface</i>	1.1 mm
Maximum Height* <i>Very Rough Surface</i> <i>*Not recommended</i>	1.8 mm

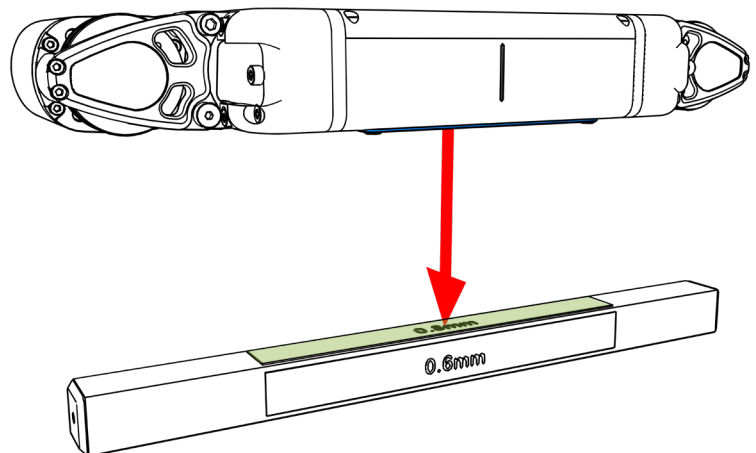

STEP 3

With the wheels lowered, tighten the two screws to set the height.

